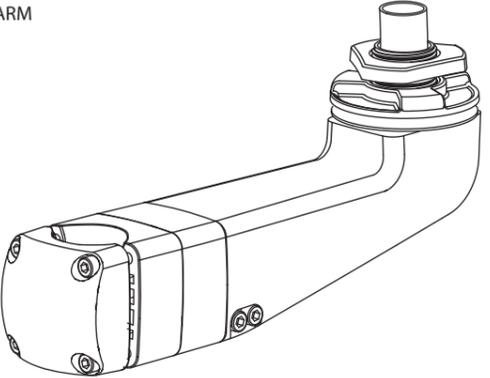







Parts List

<p>SP-ARM</p> 	<p>Front with seal fitted</p>  <p>x1</p>	<p>60416</p>  <p>x2</p>
<p>190SPH-5</p>  <p>x1</p>	<p>Back</p>  <p>x1</p>	<p>60414</p>  <p>x2</p>
	<p>60087</p>  <p>x4</p>	

Tools Required


	Hole Saw $\phi 20$ or 25mm (25/32" or 1")
	Power drill
	Drill Bit to suit instrument fixings
	Posidriv No. 3 Screwdriver
	2.5mm Allen Key
	4mm Allen Key

1

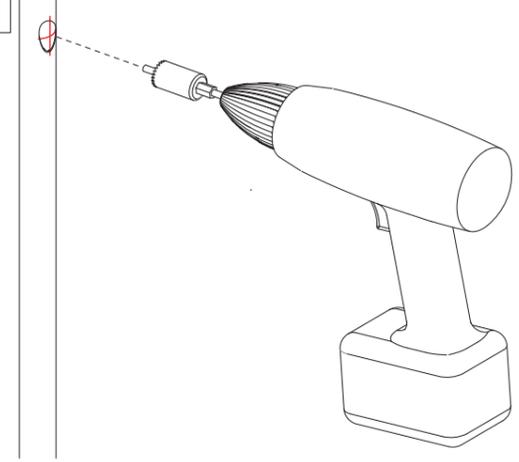

For $\phi 25\text{mm}$ (1") tube: $\phi 20\text{mm}$ (25/32") hole saw
 For $\phi 32\text{mm}$ (1 1/4") tube: $\phi 25\text{mm}$ (1") hole saw


2

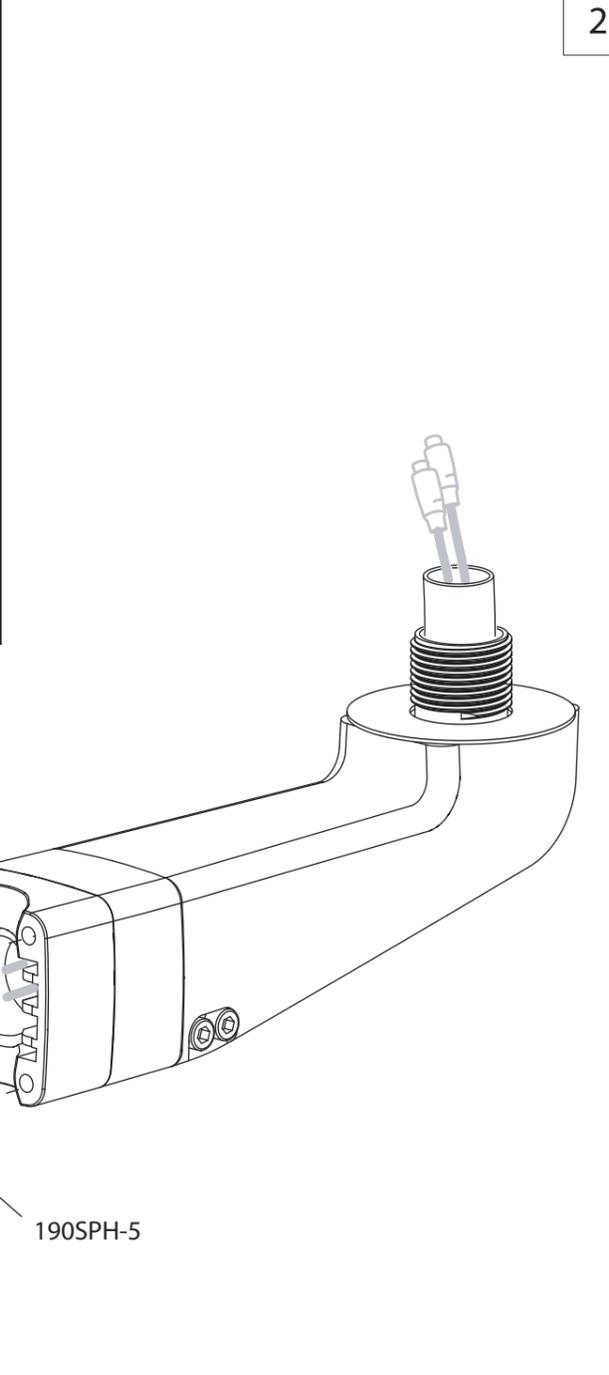


190SPH-5

4mm

3

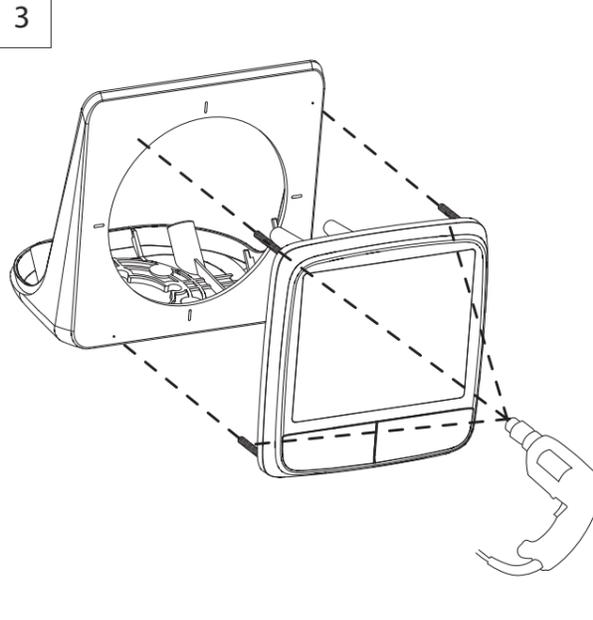

4

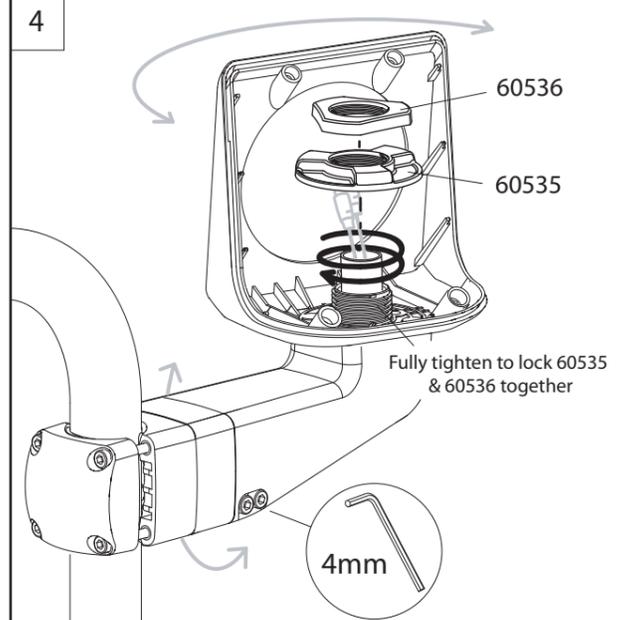


60536

60535


Fully tighten to lock 60535 & 60536 together

4mm

5

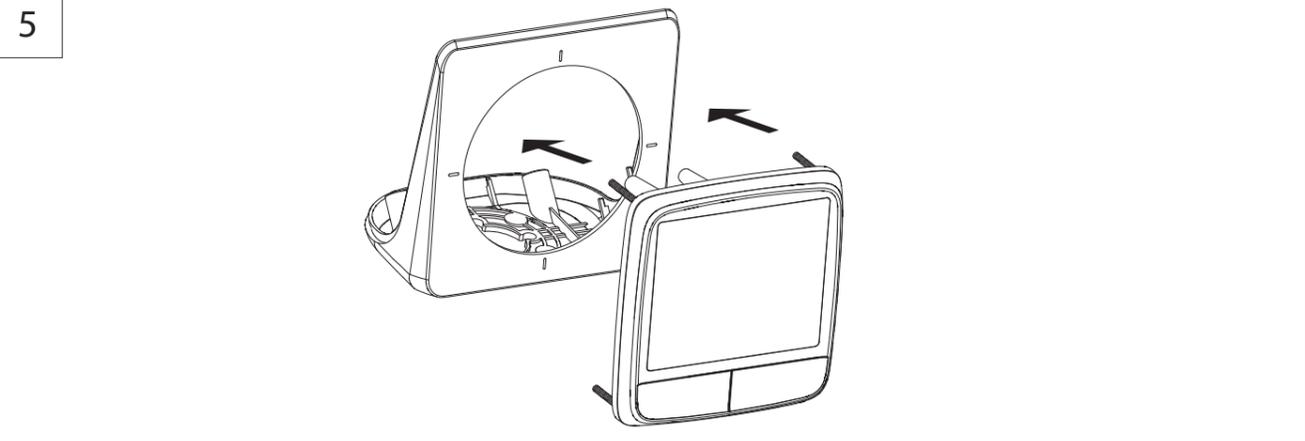

6

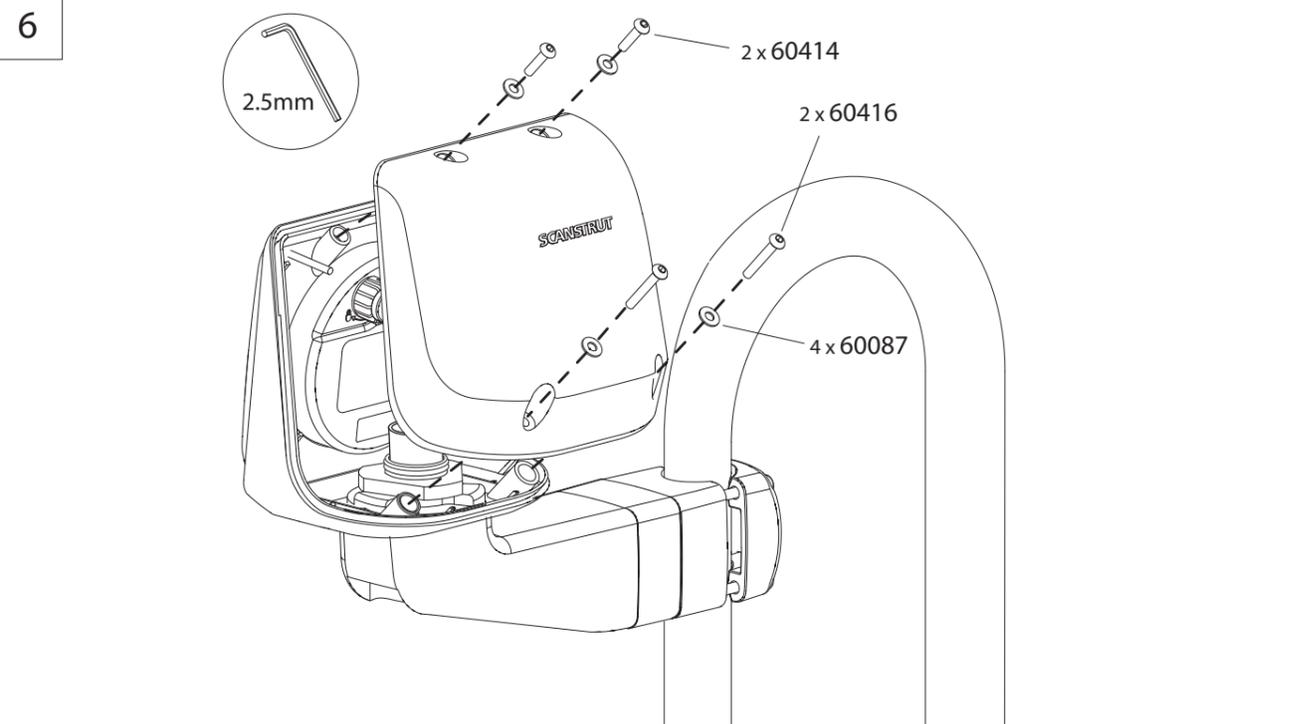

2.5mm

2 x 60414

2 x 60416

4 x 60087