

Technical Information



Scanstrut ROKK Wireless - Catch

Max phone size: 176mm (6.92") x 94mm (3.70")
(Including case)



Wireless charger (SC-CW-07E)

Input voltage range : 10-30V DC (12/24V system)
 Input current max: 1.5A
 Output power: 5W (5V, 1A)
 Standby current draw: < 0.03W
 Certifications: Qi, CE, FCC, ROHS
 Waterproof rating: IPX6 front and back

Tools Required

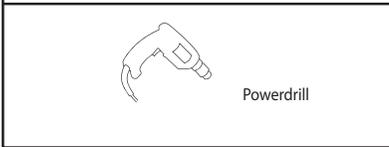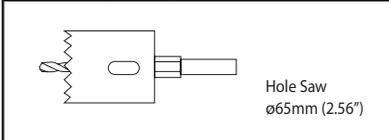

Parts List

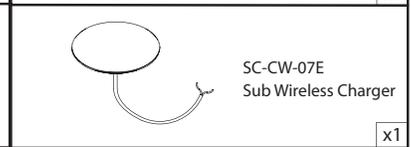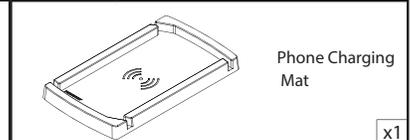

READ THE IMPORTANT SAFETY INFORMATION LEAFLET BEFORE INSTALLING

1 Choose a flat mounting location ensuring there is adequate space around and behind the mounting surface. Use the template provided to mark the corners and drill center for hole saw.

2 Use ø65mm hole saw to cut the hole, deburr and thoroughly clean surface with an alcohol wipe.

3 Peel off centre piece of self adhesive backing and remove protective film from the SC-CW-07E charger. Place the SC-CW-07E charger in recess.

4 Ensure there is no air trapped between charger and self adhesive tape.

5 Peel off the remaining self adhesive backing from the charging mat, as well as the self adhesive backing on the SC-CW-07E charger.

6 Guide the wire of SC-CW-07E through hole and align charging mat. Once aligned firmly press down into place.

7 Connect wires to 12/24V supply, ensuring a waterproof connection. Fuse according to input voltage and current.