Installation Instructions
50100 - Mast Mount Adapter Kit

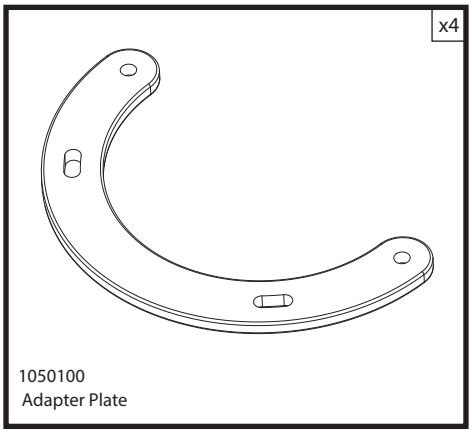

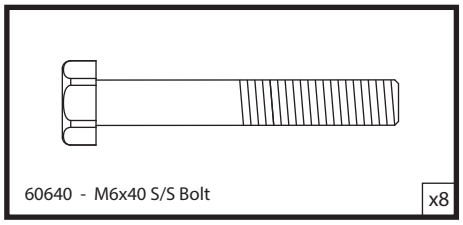

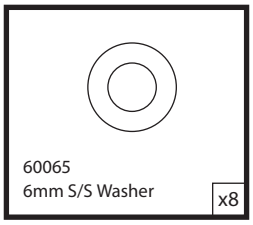

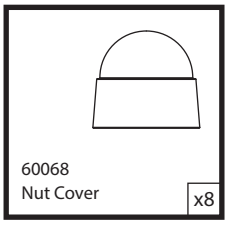

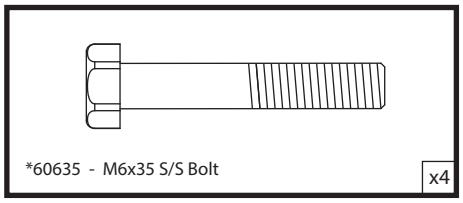

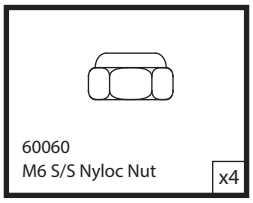

These fasteners are to be used in conjunction with fasteners included with Scanstrut Mast Mount.

*For SC12, SC14, SC16, SC18 & SC21 use 60635 - M6 x 35mm Bolt

4x M6 x 40 Bolt (60640)*

8x 6mm S/S Washer (60065)

4x M6 x 40 Bolt (60640)

8x 6mm S/S Washer (60065)

4x M6 S/S Nyloc Nut (60060)

4x M6 S/S Nyloc Nut (60060)

16x Nut Cover (60068)

SCANSTRUT